


How to change the battery

Push the sensor case from the bottom. The sensor case will slide up and unlock. Replace with a fresh CR2032 coin cell battery. Place the cover back and slide down. A click will sound to indicate the cover is secured.

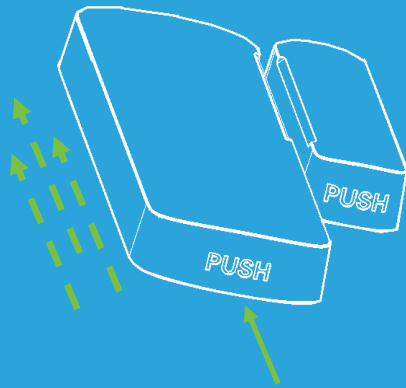

External Contact (Optional Feature):


If you have an existing external hardwired contact on the door/window you would like to monitor, a wired connector is included in the accessory bag. To learn in the external contact, make sure the hardwire contact is closed/shorted throughout the bridge pairing process. If the contact sensor was previously learned in, the contact sensor must be removed first.

For more support, please go to
www.EcolinkClearSky.com



Setup Guide

ClearSky Contact Sensor

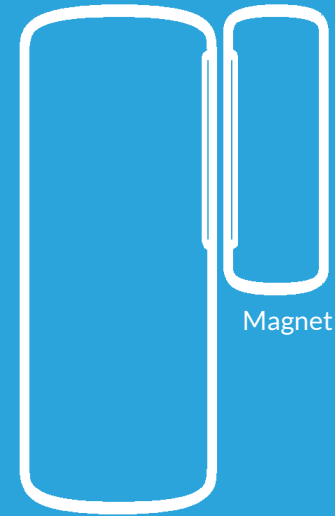

Contact Sensor

Model: CS-232

