

How to change the battery

Use a screwdriver to remove the screw on the bottom of the sensor case. Push against and outwards where the screw was located and the case will open. Replace with a fresh CR123 battery. Place the cover back on and screw the case shut.



How to adjust the angle (optional)

To adjust the angle at which the sensor detects an open or close. You can manually bend the ball-in-can as shown. By slightly bending this can up and down, there is a slight adjustability of $\pm 10^\circ$.



External Contact (Optional Feature):

If you have an existing external hardwired contact on the garage door you would like to monitor, a normally closed contact input terminal is located in the battery compartment. Use your existing wiring with the terminal block to wireless transmit the status of your external contact.



For more support, please go to
www.EcolinkClearSky.com


Ecolink 
intelligent technology

Setup Guide ClearSky Tilt Sensor




Model: CS-402

Add Contact Sensor to ClearSky Bridge

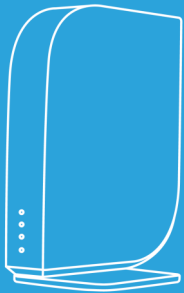

1. Press the learn button once on the back of the ClearSky Bridge.

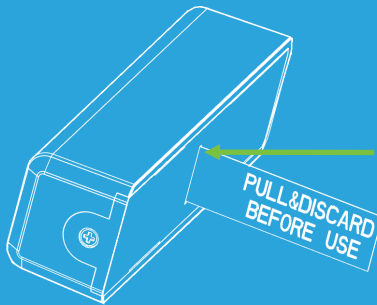

2. Pull out the battery tab from the Tilt sensor.
(or re-insert battery)

3. Your Tilt Sensor is now learned into your ClearSky Bridge and will show up in your Apple Home App.

Tilt Sensor Installation

1. Determine where you want to install the tilt sensor. The tilt sensor should be installed on the top panel or upper-most area of your garage door. Please make sure the arrow on the left side of the tilt sensor is pointing towards the ceiling in the desired mounting area.
2. To use the double-sided mounting method, make sure the mounting surface is clean and dry. Apply the tape to the sensor and then to the desired location. Apply firm pressure for several seconds. Please make sure to apply when temperatures are above 50°F for a good bond.
3. To mount with the included screws, remove the back cover with a screwdriver and screw through the dimpled circles at desired mounting location.

