 


Operation:


The ClearSky Motion Sensor will blink a red LED every time motion is detected. The motion sensor will send a motion clear only after a continuous 3 minute duration of no motion. Any motion detected will reset the rolling 3 minute timer for motion clear.



Detection Map:

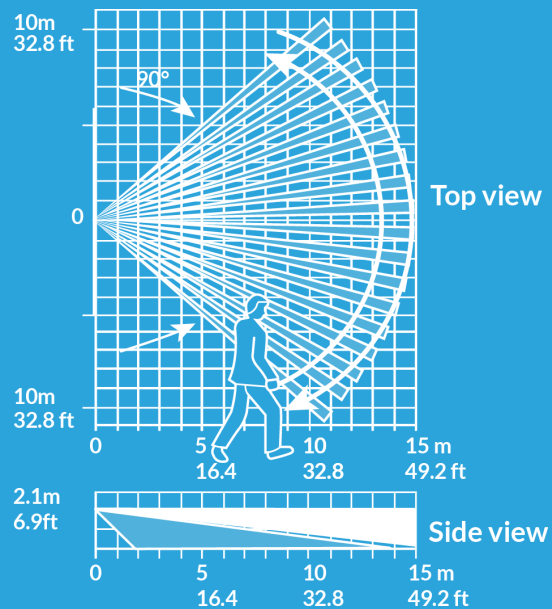


Setup Guide ClearSky Motion Sensor

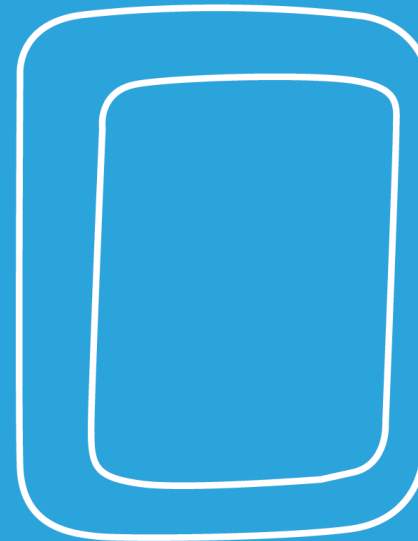


For more support, please go to
www.EcolinkClearSky.com

Model: CS-732-S

Add Motion Sensor to ClearSky Bridge

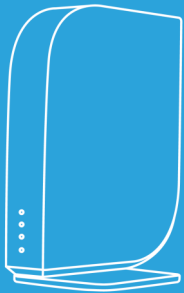

1. Press the learn button on the back of the ClearSky Bridge.

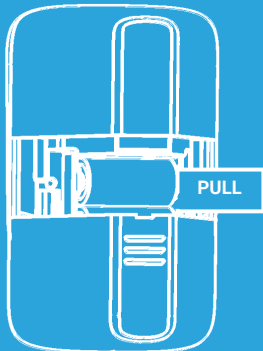

2. Pull out the battery tab from the back of the motion sensor.

(or remove both batteries and re-insert batteries)

3. Your Motion Sensor is now learned into your ClearSky Bridge and will show up in your Apple Home App.

Motion Sensor Installation

1. Find an optimal area to mount the motion sensor at a height of 6-7 feet.

General Guidance:

- Do not install near heating & cooling sources
- Do not aim the detector at windows
- Do not install outdoors
- Do not install where direct sunlight will shine on the detector
- Do not install near high-voltage electrical lines
- Do not mount on unstable surfaces

2. Use the included double-sided adhesive tape on the back battery cover of the motion sensor. Clean mounting surface and when attaching with the double-sided tape, press and hold for 10 seconds.
3. Alternatively, screws and wall anchors may be used by drilling through the battery cover at the recessed screw-thru indications.

How to change the battery

Remove the battery cover by using a flathead screwdriver on pry point #1. The motion sensor case will slide up and unlock. Replace with two fresh CR123 batteries. Place the sensor case back onto the battery cover and slide down until a click is heard. The click sound indicates the cover is now secured.

